



BILLET FOG LIGHT HOUSING INSTALLATION GUIDE

Thank you for purchasing from TransitOffRoad.com

NOTE: We recommend that a certified mechanic perform the install.

Before Starting

Tools Needed:

1. Jigsaw
2. Drill
3. Drill Bits (1/4" & 3/16")
4. 3/32" Allen Key
5. 11/32" Socket
6. File
7. Masking tape

Installation




Step 1: Start by locating the provided template to the bumper by placing the pointed corner of the template over the end of the horizontal divot line on the bumper. Then line up the top edge of the template with the contour line on the bumper



Step 2: Trace the inside of the template using a pencil.



Step 3: Apply masking tape over the line you just trace. Make sure you have at least 2 inches of masking tape covering the traced line.

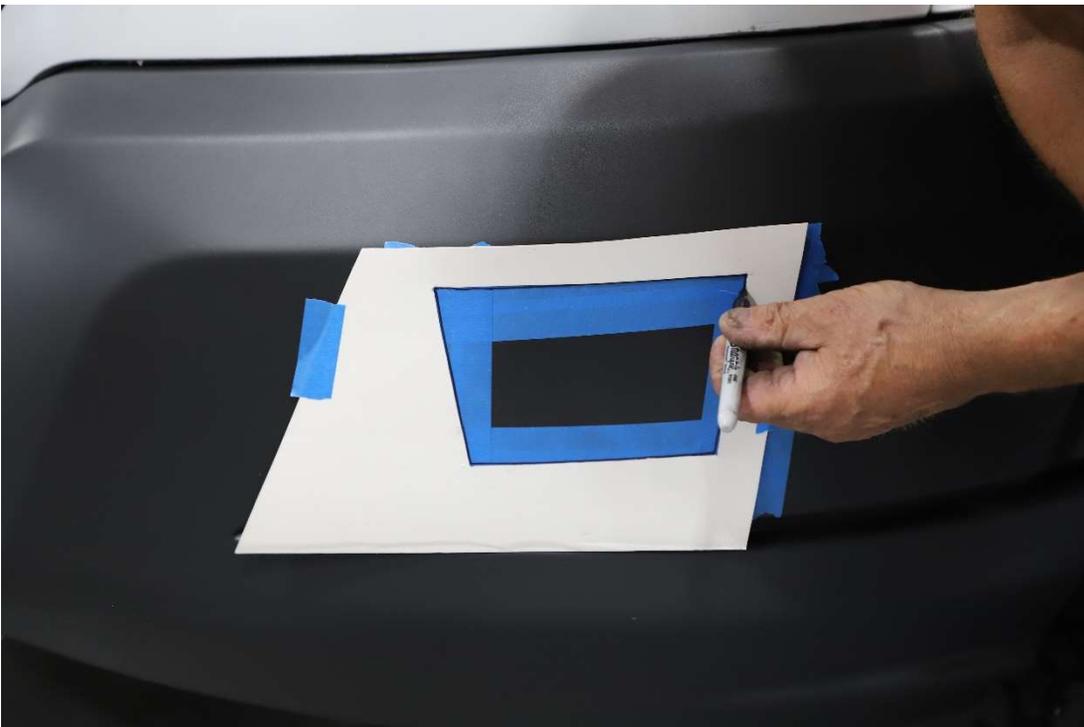

Step 4: Place template over the masked area, as in Step 1, and trace the inside of the template onto the masking tape.



Step 5: Using a ¼" drill bit drill pilot holes on the inside corners of the traced line.



Step 6: Using a jigsaw insert the blade into the pilot holes and cut along the traced lines.



Step 7: Remove the cut piece of bumper.



Step 8: Insert the Billet Fog Light Housing into the hole and position it so that the top edge lines up with the bumper contour line just above it.



Step 9: While holding the Light housing in position use a 3/16" drill bit to drill pilot holes using the screw holes as guides.



Step 10: Clean up the cutout section using a file and remove an large burrs on the drilled holes using the 1/4" drill bit.



Step 11: Insert the light housing into the hole and use the provided screws and nuts to secure it to the bumper.

Repeat Steps 1- 11 on the opposite side.

Questions? Please Call **(909) 971-3774**

Foes Fabrications Inc.
930 N Amelia Ave
San Dimas, CA 91773
